

Generator set Sound-proof type

PR33P-SAE

SPECIFICATIONS



www.prpower.com | 1300 399 499

PR Power reserves the right to make changes in model, technical specification, color, configuration and accessories without prior notice. Please contact the sales team before ordering.

Rev. [July].[2023]



1 Standards & Conditions

Design Standards

The designs and the productions are in conformity with:

- Conformite Europeenne (CE)
- ISO8528-5:2005
- AS 3000-2018
- AS 3010-2017

Environmental Operating Conditions

- Installation place: Outdoors or indoors (well ventilated).
- Ambient temperature: -25°C to 45°C. The coolant heater is needed when the temperature is below 5°C
- Humidity: Less than 90%.
- Altitude: Below one thousand (1000) meters above sea level

Factory Inspection

- Inspection items.
- · Protection devices working test.
- Starting ability in normal temperature.
- 50% rated power load moment capability.
- Voltage deviation and speed variation: 0%, 25%, 50%, 75%, 100%, 110% Load.

Painting Process

- Painting process specifications and colors are based on the manufacturer's standard.
- The customer could also choose the color which the manufacturer offers.


2 General Features

- Perkins engine 1103A-33G
- Close coupled to a Leroy Somer alternator LSA42.3VS3
- Microprocessor control module PLC-7420
- SCHENIDER main circuit breaker: 50A
- Rotate speed governor: Mechanical governor
- Excitation System: Self Excited, SHUNT
- A.V.R.Model: R220
- Key switch
- Emergency stop switch
- ATS (automatic transfer switch) receptacle

- 1x12V/70AH sealed for life maintenance free battery
- · Remote run connector
- · Lockable battery isolator switch
- · Powder coated canopy
- 50°C radiator
- · Oil pump on the engine
- · Non-returning valve for fuel inlet hose of the engine
- Steel base frame with forkslots
- Vibration isolators between the engine/alternator and base frame
- Dry type air filter
- · Base fuel tank for 45 hours running
- · Drain points for fuel tank
- Breather valve for fuel tank
- Operation Manual / Specifications

3 Equipment Specification


General technical data

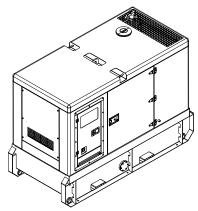

Model	PR33P-SAE
Structure type	R
Tank capacity	320L
Dry weight	1342kg
Noise level @7m	67.4dBA
Dimensions L×W×H	2338x1080x1700mm
Standby Power	33kVA/26kW
Prime Power	30kVA/24kW
Voltage/Current	415V/41.7A


Genset Fuel Consumption					
Frequency/Load	25%	50%	75%	100%	110%
50Hz (L/h)	N/A	3.9	5.4	7.1	7.9

Diesel Engine

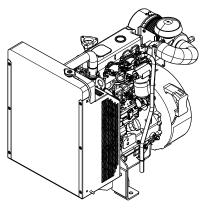


Engine Manufacturer/Brand	Parkins
=	
Engine Model	1103A-33G
Dimensions L×W×H	.1029×629×951mm
Dry Weigh (approx.)	412kg
Number of Cylinders	3
Bore	105mm
Stroke	127mm
Displacement	3.3L
Compression Ratio	19.25
Type of Injection	Direct injection
Intake System	Natural aspirated
Intake Resistance	≦6.5kPa
Cooling System	Water cooled
Fan	Pusher
Battery Voltage	12V
Type of FuelRF75-T-96 / DIN EN590) / BS2869 class A2
Type of Oil	APi-CG4/ CH4
Oil Capacity	8.31L
Type of Coolant	Glycol mixture
Coolant Capacity	10.2L
Back Pressure	≦8kPa
Standby Power	31kW
Prime Power	28.2kW
Fuel Consumption(100%load)	

Alternator

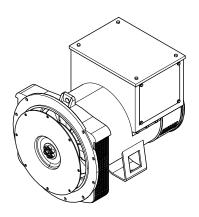

Alternator Manufacturer/Brand	Leroy Somer
Alternator Model	LSA42.3VS3
Exciter	Brushless
Cooling Fan	Cast alloy aluminum
Windings	100% copper
Insulation Class	H
Winding Pitch	2/3
Terminals	12
Drip Proof	IP23
Altitude	≤1000m
Overspeed	2250rpm
Air Flow	0.15m³/s
Voltage Regulation	±0.5%
Total harmonic TGH / THC	< 4%
Telephone Interference	THF<2%;TIF<50


PLC-7420 Control System

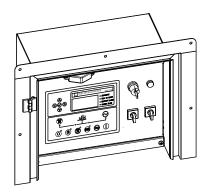


PLC-7420 is an advanced control module based on microprocessor, containing all necessary functions for protection of the genset and the breaker control. It can monitor the mains supply, and automatically start the engine when the mains is abnormal. Accurately measure various operational parameters and display all values and alarms information on the LCD. In addition, the control module can automatically shut down the engine and indicate the engine failure.

- Microprocessor control, with high stability and credibility
- Monitoring and measuring operational parameters of the mains supply and genset
- Indicating operation status, fault conditions, all parameters and plarms
- Multiple protections; multiple parameters display, like pressure, temp. etc.
- Manual, automatic and remote work mode selectable
- Real time clock for time and date display, overall runtime display, 250 log entries
- Overall power output display
- Integral speed/frequency detecting, telling status of start, rated operation, overspeed etc.
- Communication with PC via RS485 OR RS232 interface, using MODBUS protocol


4 Overall Dimensions

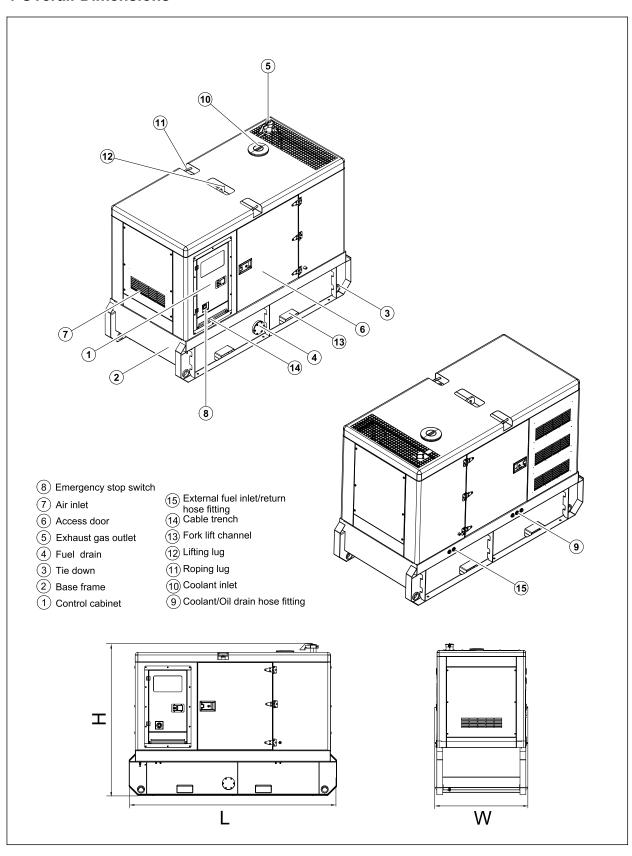

5 Control System

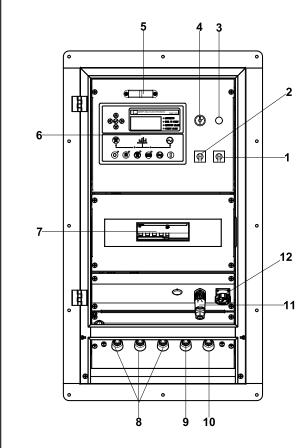

Control & Field wiring cabinet

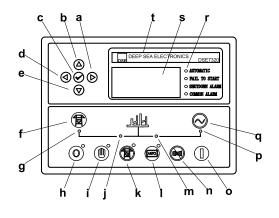

Control Panel

Ref.	Description
1	Control cabinet lamp switch
2	Mains input changeover switch
3	Charge indicator
4	Key switch
5	Control cabinet lamp
6	Control module
7	Main circuit breaker
8	Live wire terminals
9	Neutral wire terminal
10	Ground wire terminal
11	Remote run connector
12	ATS connector

a Button (next page) b Button (increase value / previous item) c Button (accept) d Button (previous page) e Button (decrease value / next item) f Button (transfer the load to the mains supply, when in Manual mode only) g Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) I Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display t Control module name		
c Button (accept) d Button (previous page) e Button (decrease value / next item) f Button (transfer the load to the mains supply, when in Manual mode only) g Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	а	Button (next page)
d Button (previous page) e Button (decrease value / next item) f Button (transfer the load to the mains supply, when in Manual mode only) g Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED g Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	b	Button (increase value / previous item)
e Button (decrease value / next item) f Button (transfer the load to the mains supply, when in Manual mode only) g Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) I Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	С	Button (accept)
f Button (transfer the load to the mains supply, when in Manual mode only) g Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	d	Button (previous page)
when in Manual mode only) 9 Mains supply available LED h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	е	Button (decrease value / next item)
h Stop / Reset button i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	f	Button (transfer the load to the mains supply, when in Manual mode only)
i Manual button (Manual control mode) j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	g	Mains supply available LED
j Mains supply on load LED k Test button (Test mode) l Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	h	Stop / Reset button
k Test button (Test mode) I Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	i	Manual button (Manual control mode)
I Auto button (Auto mode) m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	j	Mains supply on load LED
m Genset on load LED n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	k	Test button (Test mode)
n Mute/Lamp test button o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	I	Auto button (Auto mode)
o Start button (Manual) p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	m	Genset on load LED
p Genset available LED q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	n	Mute/Lamp test button
q Button (transfer the load to the genset, when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	0	Start button (Manual)
when in Manual mode only) r Alarm LED (4 alarm items) s LCD display	р	Genset available LED
s LCD display	q	
	r	Alarm LED (4 alarm items)
t Control module name	s	LCD display
	t	Control module name